

SENA



M1 EVO
SMART MOUNTAIN BIKE HELMET

QUICK START GUIDE

RIDE CONNECTED

The M1 EVO is comfortable and protective mountain bike helmet. The M1 EVO with built-in Bluetooth® capabilities allows you to take phone calls and listen to your favorite tunes. You can use the Mesh Intercom™ to communicate with other M1 EVO users and use the LED Taillight to ride safely.



Bluetooth® 5.2



Mesh Intercom™
up to 900 m (0.5 mi)*



Taillight



Fast Charging

* in open terrain

GETTING STARTED

1. This product comes with a Quick Start Guide, which is a basic version of the User's Guide. **A FULL VERSION OF THE USER'S GUIDE CAN BE DOWNLOADED AT SENA.COM.**
2. Update this product for free with the latest firmware to fully enjoy the new advanced features built into this product. Visit sena.com to see how to update your product.
3. Users can follow Sena on Facebook, YouTube, Twitter and Instagram to receive the most up to date information on products, helpful tips and all other announcements regarding Sena products.

SENA



SENA Technologies, Inc.

Customer Support: sena.com

GETTING STARTED

 
How to Use This Guide

The legend and callouts are here to help you read the illustrations. New technology can be confusing, but we've created a simple way to perform actions using illustrations.




Buttons

Bluetooth System's Buttons

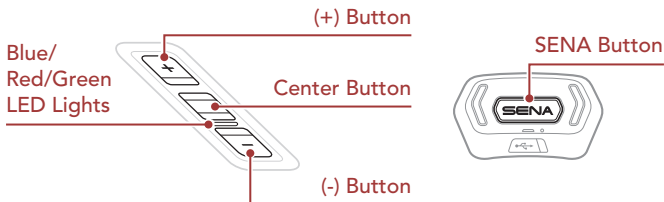


QUICK START GUIDE

 Product Details

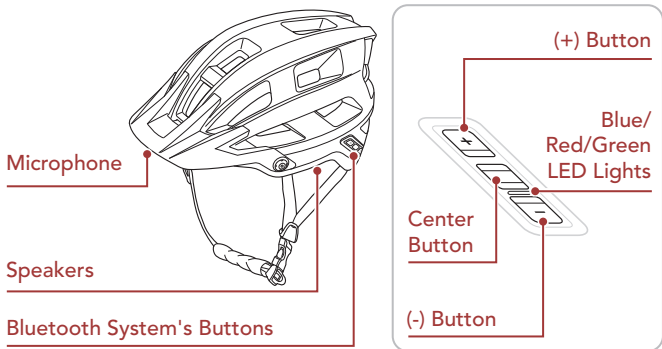

SENA Button

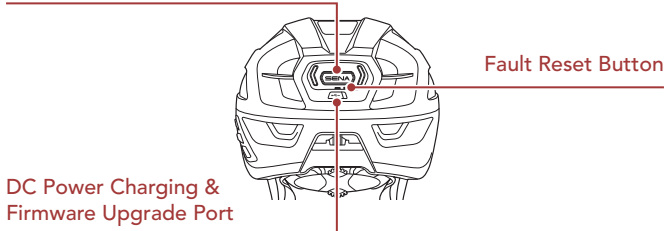 

QUICK START GUIDE

How To Wear the Helmet

1. Position the helmet on your head with the front covering your forehead.
2. Position the strap adjuster centered, just below your ears.
3. Position the helmet low on your forehead with the buckle under the chin and back against the throat. The straps should fit comfortably around both ears.
4. After removing the chinstrap pad, adjust the chinstrap tension at the buckle so the chinstrap is tight and comfortable by pulling the chinstrap end through the buckle to either tighten or loosen as needed.

 
Chinstrap Pad

Buckle

Strap Adjuster


Chinstrap

O-Ring

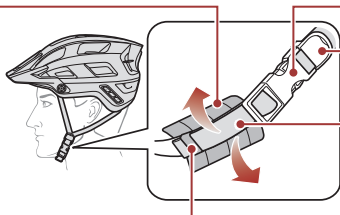


QUICK START GUIDE

 - Secure the excess strap with O-ring and then attach the chinstrap pad.

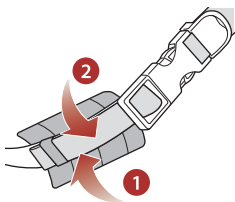


Note: Check the chinstrap's position and tension regularly to ensure proper fit.

 - Turn the retention system knob clockwise to tighten or counterclockwise to loosen.
- To change the height of the retention system, firmly pull or push the retention system upward or downward to a different position.

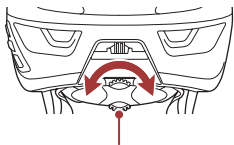

Retention System Knob

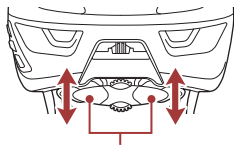 

Retention System

⚠ WARNING: For maximum protection, this helmet must be fitted and attached properly to the wearer's head in accordance with the following instructions. If after adjustment the helmet does not fit properly, do not use the helmet. Return it to the retailer or Sena.

QUICK START GUIDE

Sena Cycling App

Download the **Sena Cycling App** at **Google Play Store** or **App Store**.



Sena Device Manager


The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from **sena.com**.

NOTICE

- This **Quick Start Guide (Version 2.0.0 or higher)** explains how to operate the M1 EVO with **firmware version 2.0 or higher**.
- For operating the M1 EVO with a **firmware version lower than 2.0**, refer to the **M1 EVO Quick Start Guide** that is available when you connect the M1 EVO to the Cycling App.

QUICK START GUIDE

Icon Legend

 **Tap** button the specified number of times

 **Press and Hold** button for the specified amount of time



"Hello"

Audible prompt

Basic Operations

 
Powering On




Powering Off



Volume Up



Volume Down

 


QUICK START GUIDE

Checking the Battery Level

Instruction is for when powering the Bluetooth system on.

 Visual Method

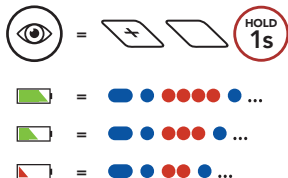

Phone Pairing



2. Select **M1 EVO** in the list of Bluetooth devices detected.

 


- For more information on phone pairing, refer to the User's Guide.

QUICK START GUIDE

Mobile Phone


Answer a Call



Make Call with Voice Dialer




 End/Reject a Call




Music Controls

 
Play/Pause



Next Track

 

Previous Track

 


QUICK START GUIDE

Mesh Intercom™


When **Mesh Intercom** is enabled, the **M1 EVO** will automatically connect to nearby **M1 EVO** users and allow them to talk to each other by pressing the **Center Button**.

 Mesh Intercom On



"Mesh intercom on"

 Mesh Intercom Off




"Mesh intercom off"

Mic Enable/Disable (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.

 Enable/Disable the Microphone




QUICK START GUIDE

Channel Setting (Default: channel 1)

If the **Mesh Intercom** communication experiences interference because other groups are also using the **channel 1**, change the channel. You can select one of 1 to 9 channels.

Using the button

 Enter into the Channel Setting




"Channel setting, 1"



Navigate Between Channels

 
(1 → 2 → ... → 8 → 9 → Exit → 1 → ...)



"#"



 Save the Channel



"Channel is set, channel #"

QUICK START GUIDE

Note: To exit the **Channel Setting**, tap the **(+) Button** or **(-) Button** until you hear a voice prompt, **"Exit"**, and tap the **Center Button**.

Using the Sena Cycling App

You can select the channel through the **Sena Cycling App**.

LED Taillight

Using the SENA Button

LED On and Solid



Night Flash



Day Flash



LED Off



Note: Do not tap the button continuously.

Using the Sena Cycling App

You can control the LED Taillight through the **Sena Cycling App**.

 
 
QUICK START GUIDE

Bluetooth System Configuration Menu


Accessing the Configuration Menu



Navigating Between Menu Options






Execute Menu Options

 


Troubleshooting

    Factory Reset



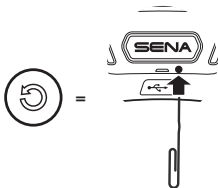


 


















Fault Reset












Note: Fault Reset will not restore the Bluetooth system to factory default settings

QUICK REFERENCE

TYPE	OPERATION	BUTTON COMMANDS
 Basic Operations	Power on	 
	Power off	 
	Volume up/down	 or  
 Mobile Phone	Answer phone call	 
	End/reject phone call	 
	Voice dial	 
 Music	Play/Pause music	 
	Track forward	 
	Track backward	 

QUICK REFERENCE

TYPE	OPERATION	BUTTON COMMANDS
 Mesh Intercom™	Mesh Intercom on/off	 (TAP 1x)
	Mic enable/disable	 (HOLD 1s)
	Channel setting	 (TAP 2x)
 LED Taillight	LED on and solid	 (TAP 1x)
	Night flash	 (TAP 1x)
	Day flash	 (TAP 1x)
	LED off	 (TAP 1x)